

kalon

ASSEMBLY INSTRUCTIONS SIMPLE BED

Model N°: Simple Bed 801 | KALON STUDIOS
www.kalonstudios.com | studio@kalonstudios.com
 P.O. Box 421462 | Los Angeles | CA 90042 | 866.514.2034

ENTIRELY ORIGINAL.
 DESIGN FOR
 A SUSTAINABLE CULTURE.

Made with uncompromising craftsmanship by traditional woodworkers in the USA from 100% sustainably-harvested, solid, domestic wood, the Simple Bed is a celebration of craft and contemporary American woodworking.

The unique character of the natural material is an integral part of the design that will only improve with age and use.

As with all of our pieces, we used the most sustainable materials and methods available. This piece is manufactured in America, upholding the long-standing regional tradition of furniture making and the craftspeople who are a part of it. Designed to be as socially and environmentally responsible as it is beautiful, this piece was built to last for generations of use.

www.kalonstudios.com | www.kalonstudios.de

PIECES INCLUDED

Headboard
x1 (Optional)



Footboard
x2 (x1 if using Headboard)



Center Support Rail
x1 (Full, Queen & King only)



Mattress Slat
x11



Side Panel
x2



Side Support Rail
x 2



Fifth Foot
x1 (Excluding
Twin Beds)



Part A1
x4



Part A2
x4



Part B
x4



Part A1-L
x12
(x8 Twin Frame)




Part A2-L
x12
(x8 Twin Frame)



Part B-L
x12
(x8 Twin Frame)



Allen Key
x1 Large x1 Small -
(Fifth Foot only)



Pocket Screw
x4



Part E
x1
(Fifth Foot only)



More fun when done with two people. Even better with an electric screwdriver


Step 1 Attaching Hardware Screw parts B-L into holes on inside of Headboard and Footboard. Insert parts A2-L into holes on inside of Side Panels and outer edge of Center Support Rail. Position parts B on inside of Side Panel at foot and A2 into Side Support Rails.

Step 2 Frame Assembly First, slide attached parts B into available holes in Side Support Rail and into A2, aligning through-hole in B with available hole in A2. Using supplied Small Allen Key, screw parts A1 into A2. Screw until tight. Place Side Panels against Headboard and Footboard, repeat steps above with B-L, A2-L and A1-L. Screw until tight.

Step 3 Attaching Fifth Foot If assembling Queen or King bed attach Fifth Foot to Center Support Rail using part E. Using supplied Large Allen Key, screw to tighten. The Fifth Foot is optional on Full size beds.

Step 4 Mattress Slats Lay Mattress Slats in frame within available recesses. Using available holes at either end of center mattress slat, screw pocket screws into side rail. Do not over tighten.

Enjoy!

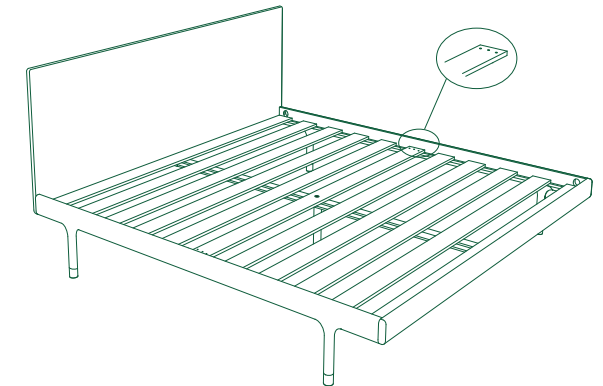

Caution: Please use caution when assembling beds with full headboards, as the headboard represents a significant weight. To prevent the bed frame from tipping during assembly, we recommend assembling headboard against a wall. Please continue to use caution after assembly, as the piece may tip without the weight of a mattress. **DO NOT DRAG BED**, dragging the bed will cause damage that is not covered under warranty.