

kalon


ASSEMBLY INSTRUCTIONS IO CRIB

INSTRUCTIONS POUR LE MONTAGE DU LIT BEBE IO

Model N°: Io Crib 011 | KALON STUDIOS

www.kalonstudios.com | studio@kalonstudios.com

P.O. Box 421462 | Los Angeles | CA 90042 | 866.514.2034

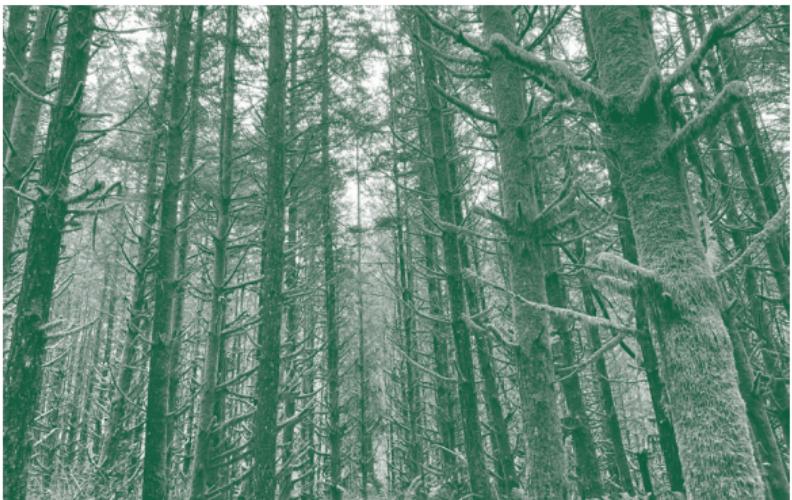

ENTIRELY ORIGINAL DESIGN FOR A SUSTAINABLE CULTURE

Made with uncompromising craftsmanship by traditional woodworkers in Germany from 100% sustainably-harvested, solid, european hardwood, the Io Collection is a celebration of craft and contemporary woodworking.

The unique character of the natural material is an integral part of the design that will only improve with age and use.

As with all of our pieces, we used the most sustainable materials and methods available. Manufactured in Germany, this collection is upholding the long-standing regional tradition of furniture making and the craftspeople who are a part of it. Designed to be as socially and environmentally responsible as it is beautiful, each piece is built to last for generations of use.

MAINTENANCE, CLEANING AND STORAGE

Please take care to periodically check the crib/toddler bed to ensure that it is properly assembled and that no parts have come loose. Verify that the crib/toddler bed parts remain snuggly fit against one another and tighten hardware if needed. Clean with a rag dampened with warm water. Do not use soap or harsh chemicals as they will remove the natural, oil-wax finish.

Maintain finish with wood oil of your choice or contact studio@kalonstudios.com for recommendations.

For best storage, repack crib/toddler bed in original packaging and/or store in a dry area, upright and flat.

Do not allow to bend.

Keep instructions in pouch for future use.

ENTRETIEN, NETTOYAGE ET RANGEMENT

Veuillez inspecter régulièrement le meuble, s'assurer que les pièces soient bien assemblées et que les composantes ne se soient pas desserrées. Au besoin, utilisez un tournevis pour resserrer les pièces.


Nettoyez les surfaces à l'aide d'un chamois imprégné d'eau tiède. Veuillez éviter l'utilisation de savon ou de nettoyants chimiques qui risqueraient d'enlever le fini de cire et d'huile naturelle. Vous pouvez redonner un lustre au fini en appliquant une huile naturelle pour bois de votre choix ou nous contacter par courriel à studio@kalonstudios.com pour des recommandations.

Pour optimiser l'entreposage, vous pouvez démonter et remettre le meuble dans son emballage original et l'entreposer dans un environnement sec en position verticale ou horizontale afin d'éviter toute déformation.

Veuillez conserver les instructions dans la pochette pour la prochaine utilisation.

PIECES INCLUDED / PIÈCES INCLUSES

Refer to pouch for true to life diagram of hardware.

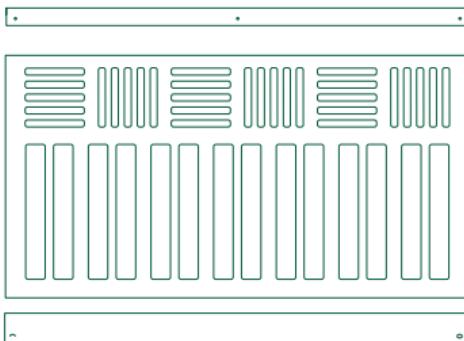


..... Mattress Support (x1)
Support de matelas (x1)



..... Side Panel (x2)
Panneau latéral (x2)

..... Conversion Side Rail (x1)
Panneau de Conversion (x1)

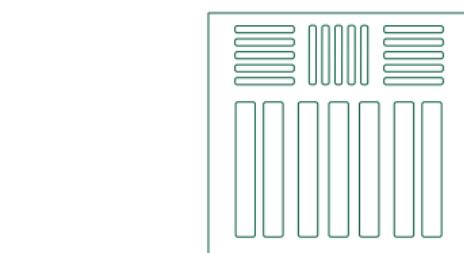

..... Side Panel Foot (x2)
Panneau inférieur latéral (x2)

..... End Panel (x2)
Panneau d'extrémité (x2)



..... End Panel Foot (x2)
Panneau inférieur d'extrémité (x2)



..... A1 (x30)



..... B (x30)



..... A2 (x30)




..... J (x8)




..... Allen Key (x1)


*Philips head screwdriver required for assembly. Tournevis cruciforme requis pour le montage.
More fun when done with two people.*

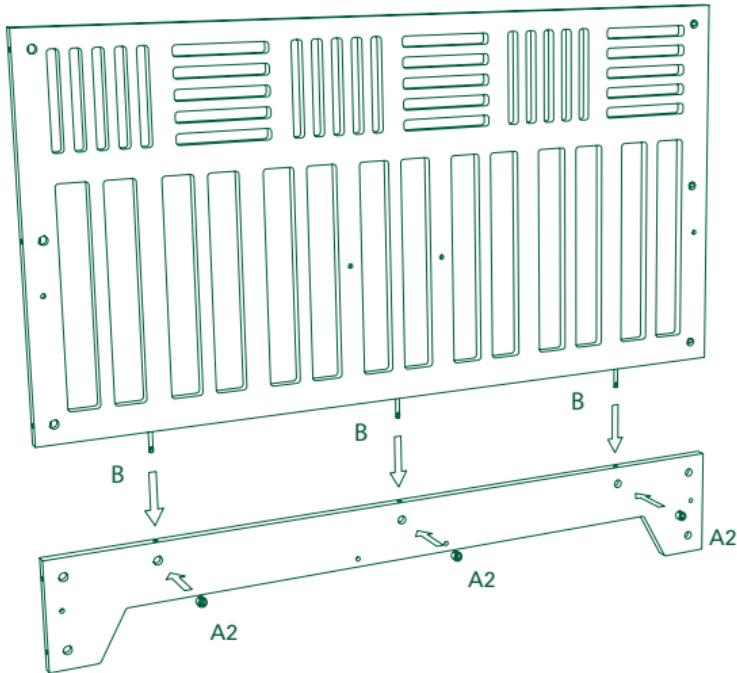


DETAIL / DÉTAIL 1

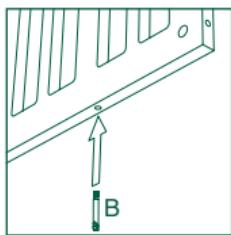

DETAIL / DÉTAIL 2

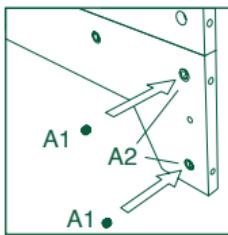

DETAIL / DÉTAIL 3


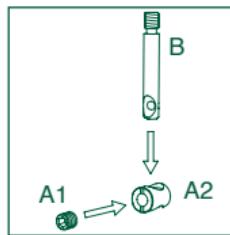


STEP 1

- Fully thread parts B into holes along bottom edge of the Side and End Panels. (Detail 1)
- **Troubleshooting:** Sometimes screw inserts can be blocked by small amounts of glue. If you encounter any obstruction when inserting hardware, thread the bolt in and out several times to clear the blockage.
- Once fully screwed in, ensure that the through hole in part B aligns with holes on inner face of Side and End Panel Feet. Part B may need to be slightly backed out for true alignment.
- Insert parts A2 into large holes along inner face of all panel feet ensuring that A2 is centered and that the holes align vertically.
- Lower the Side and End Panels onto panel feet by sliding Parts B through holes along upper edge of all panel feet and into holes in parts A2.
- Use the small Allen Key to screw parts A1 into parts A2. (Detail 2)
- For an illustrated reference of hardware assembly see Detail 3.

ETAPE 1

- Vissez les pièces B dans les ouvertures prévues sur les côtés des panneaux latéraux et des panneaux d'extrémité. (Détail 1)
- **Dépannage:** Parfois, les inserts de vis peuvent être bloqués par de petites quantités de colle. Si vous rencontrez un obstacle lors de l'insertion du matériel, vissez et resserrez le boulon plusieurs fois pour éliminer le blocage.
- Insérez les pièces A2 dans les ouvertures prévues sur le côté intérieur de l'ensemble des panneaux inférieurs.
- Assemblez les panneaux supérieurs avec les panneaux inférieurs en insérant les pièces B dans l'ouverture correspondante.
- Avec la petite clé Allen, fixer les pièces A1 dans l'ouverture correspondante dans les pièces A2. (Détail 2)

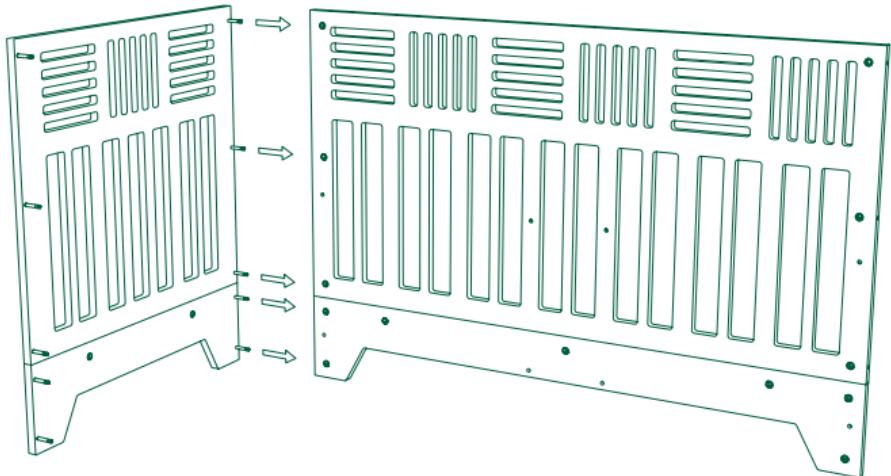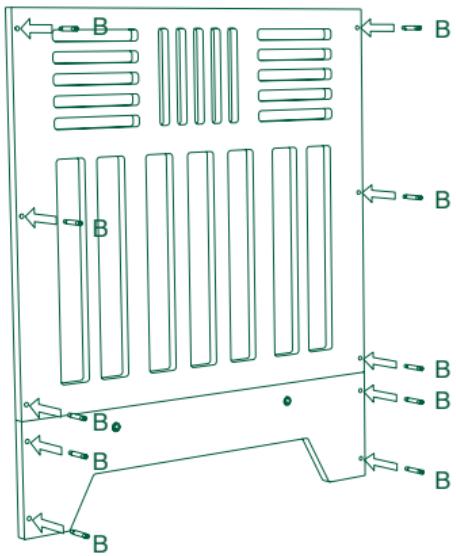

STEP 2

- Fully thread parts B into holes along inner face of the End Panels and End Panel Feet.
- Once fully screwed in, ensure that the through hole in part B aligns with holes on the inner face of the assembled Side Panels. Part B may need to be slightly backed out for true alignment.

ETAPE 2



- Vissez les pièces B dans les ouvertures prévues sur les côtés des panneaux d'extrémité et des panneaux inférieur d'extrémité.
 - Assurez-vous que le trou traversant dans les pièces B est aligné avec les trous sur la face intérieure des panneaux latéraux assemblés. Les pièces B peuvent avoir besoin d'être légèrement reculées pour un alignement correct..
-
-

STEP 3

- Insert parts A2 into large holes along inner face of Side Panels and Side Panel Feet ensuring that A2 is centered and that the holes align horizontally.
- Join the assembled Side and End Panels by sliding Parts B through holes along outer edge of Side Panels and into holes in parts A2.
- As in step 1, use the small Allen Key to screw parts A1 into parts A2. (See Detail 2 and 3 in Step 1 for reference)

ETAPE 3

- Insérez les pièces A2 dans les ouvertures prévues sur le côté intérieur de l'ensemble des panneaux latéraux.
- Joignez les panneaux latéraux et d'extrémité en faisant glisser les pièces B à travers les trous le long du bord extérieur des panneaux latéraux et dans les trous des pièces A2.
- Comme à l'étape 1, utilisez la petite clé Allen pour visser les pièces A1 dans les pièces A2.

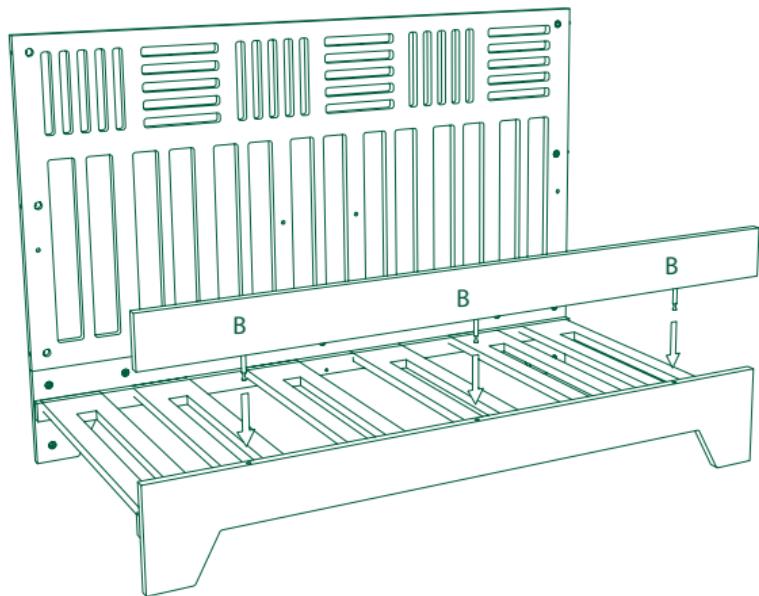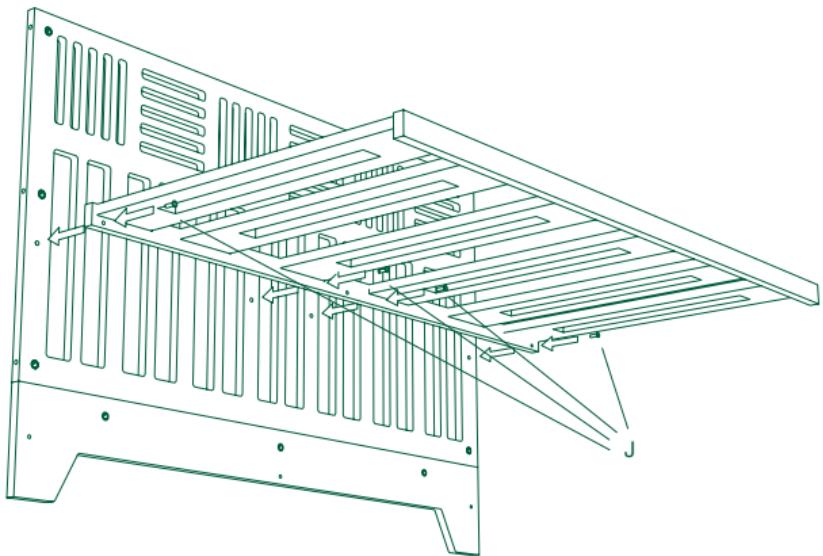

STEP 4 adjusting mattress height

- Select the appropriate height for the mattress support.
- Align holes on mattress support with those on the inner face of the Side Panels. Insert parts J through holes.
- Use a philips head screwdriver to tighten parts J.

ETAPE 4 regler la hauteur du matelas

- Sélectionnez la hauteur appropriée pour le support du matelas.
- Alignez les trous du support de matelas avec ceux de la face intérieure des panneaux latéraux. Insérez les pièces J dans les ouvertures prévues.
- Utilisez un tournevis cruciforme pour fixer les pièces J.

STEP 5 single panel toddler bed conversion

- These instructions are for single side panel conversion only and are not for the lo Toddler Bed Conversion Kit. Flip the book for lo Conversion Kit instructions.
- Follow the instructions in Steps 1, 2 and 3 using the Conversion Side Panel in the place of the crib Side Panel. Attach the mattress support in the lower position following step 4.
- Use the supplied Allen Keys to ensure all hardware parts are tightened.

ETAPE 5 conversion de lit de toddler a panneau unique

- Ces instructions concernent uniquement la conversion de panneau latéral et non le kit de conversion lo. Feuilletez le livre pour les instructions du kit de conversion lo.
- Suivez les instructions des étapes 1 et 2 en utilisant le panneau latéral de conversion à la place du panneau latéral.
- Utilisez les clés Allen fournies pour vous assurer que toutes les pièces sont serrées.

⚠️ WARNING: Failure to follow these warnings and the assembly instructions could result in serious injury or death. DO NOT use this crib if you cannot exactly follow the accompanying instructions. Read all instructions before assembling crib. KEEP INSTRUCTIONS IN POUCH FOR FUTURE USE.

- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
- Check this product for damaged hardware, loose joints, loose bolts or other fasteners, missing parts, or sharp edges before and after assembly and frequently during use. Securely tighten loose bolts and other fasteners. DO NOT use crib if any parts are missing, damaged or broken. Contact Kalon Studios for replacement parts and instructional literature if needed. DO NOT substitute parts.
- If refinishing, use a non-toxic finish specified for children's products.
- Follow warnings on all products in a crib. • Infants can suffocate on soft bedding. Never add a pillow or comforter. Never place additional padding under an infant.
- Strings can cause strangulation! DO NOT place items with a string around a child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over a crib or attach strings to toys. DO NOT place crib near or within reach of a window or door where cords from blinds or drapes may strangle a child. • To help prevent strangulation tighten all fasteners. A child can trap parts of the body or clothing on loose fasteners.
- Never use plastic shipping bags or other plastic film as mattress covers because they can cause suffocation.
- Infants can suffocate in gaps between crib sides and a mattress that is too small.
- When child is able to pull to a standing position, set mattress to lowest position and remove bumper pads, large toys and other objects that could serve as steps for climbing out.
- Stop using crib when child begins to climb out or reaches the height of 89 cm. The child should be placed in a toddler bed or regular bed.

CAUTION: Any mattress used in this crib shall be at least 69cm by 131cm with a thickness not exceeding 15cm.

WARNING: Read all instructions before assembling toddler bed. KEEP INSTRUCTIONS FOR FUTURE USE. Failure to follow these warnings and the assembly instructions could result in serious injury or death. • INFANTS HAVE DIED IN TODDLER BEDS FROM ENTRAPMENT. Openings in and between bed parts can entrap head and neck of small child. • NEVER use bed with children younger than 15 months. • ALWAYS follow assembly instructions. • NEVER place bed near windows where cords from blinds or drapes may strangle a child. • NEVER suspend strings over bed. • NEVER place items with string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts. • To avoid dangerous gaps, any mattress used in this bed shall be a full-size crib mattress at least 131 cm in length, 69 cm in width, and 15 cm in thickness. • Before each usage or assembly, inspect toddler bed for damaged hardware, loose joints, missing parts or sharp edges. • DO NOT use toddler bed if any parts are missing or broken. Ask your dealer or write to Kalon Studios for replacement parts and instructional literature if needed. DO NOT substitute parts. • Never use plastic shipping bags or other plastic film as mattress covers because they can cause suffocation. • DO NOT use a water mattress with this toddler bed.

STEP 3

- Insert parts A2 into large holes along inner face of Side Panels and Side Panel Feet ensuring that A2 is centered and that the holes align horizontally.
- Join the assembled Side and End Panels by sliding Parts B through holes along outer edge of Side Panels and into holes in parts A2.
- As in step 1, use the small Allen Key to screw parts A1 into parts A2. (See Detail 2 and 3 in Step 1 for reference)

ETAPE 3



- *Insérez les pièces A2 dans les ouvertures prévues sur le côté intérieur de l'ensemble des panneaux latéraux.*
 - *Joignez les panneaux latéraux et d'extrémité en faisant glisser les pièces B à travers les trous le long du bord extérieur des panneaux latéraux et dans les trous des pièces A2.*
 - *Comme à l'étape 1, utilisez la petite clé Allen pour visser les pièces A1 dans les pièces A2.*
-

STEP 4 attaching mattress support

- Align holes on mattress support with those on the inner face of the Side Panels. Insert parts J through holes.
- Use a philips head screwdriver to tighten parts J.

ETAPE 4 pour fixer le panneau d'appui

- *Alignez les trous du support de matelas avec ceux de la face intérieure des panneaux latéraux. Insérez les pièces J dans les ouvertures prévues.*
- *Utilisez un tournevis cruciforme pour fixer les pièces J.*

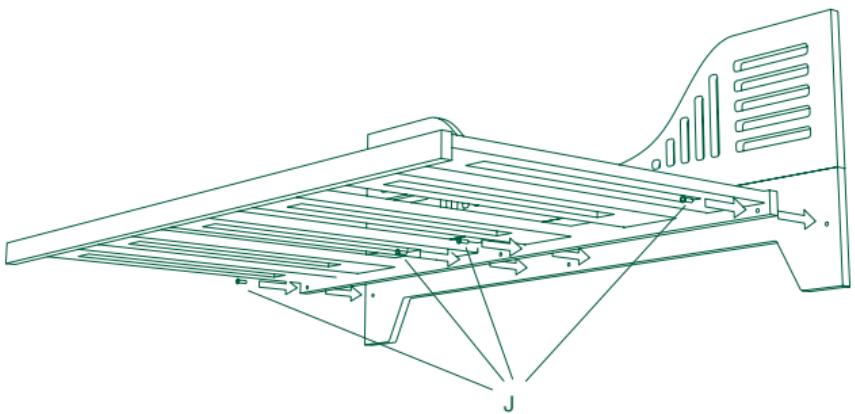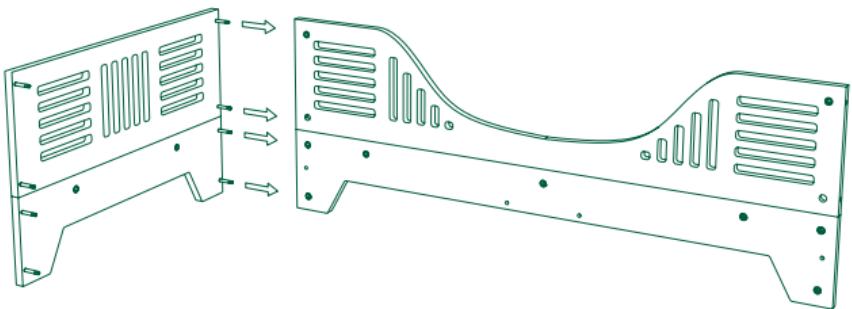

STEP 1

- Fully thread parts B into holes along bottom edge of the Side and End Panels. (Detail 1)
- Once fully screwed in, ensure that the through hole in part B aligns with holes on inner face of Side and End Panel Feet. Part B may need to be slightly backed out for true alignment.
- Insert parts A2 into large holes along inner face of all panel feet ensuring that A2 is centered and that the holes align vertically.
- Lower the Side and End Panels onto panel feet by sliding parts B through holes along upper edge of all panel feet and into holes in parts A2.
- Use the small Allen Key to screw parts A1 into parts A2. (Detail 2)

ETAPE 1


- Vissez les pièces B dans les ouvertures prévues le long des panneaux latéraux et des panneaux d'extrémité. (Détail 1)
 - Insérez les pièces A2 dans les ouvertures prévues sur le côté intérieur de l'ensemble des panneaux inférieurs.
 - Assemblez les panneaux supérieurs avec les panneaux inférieurs en insérant les pièces B dans l'ouverture correspondante.
 - Avec la petite clé Allen, fixer les pièces A1 dans l'ouverture correspondante dans les pièces A2. (Détail 2)
-
-

STEP 2


- Fully thread parts B into holes along inner face of the End Panels and End Panel Feet.
- Once fully screwed in, ensure that the through hole in part B aligns with holes on the inner face of the assembled Side Panels. Part B may need to be slightly backed out for true alignment

ETAPE 2


- Insérez les pièces B dans les ouvertures prévues sur la face intérieure des panneaux d'extrémité assemblés. À l'aide de la grande clé Allen, fixez les pièces B.
- Assurez-vous que le trou traversant dans les pièces B est aligné avec les trous sur la face intérieure des panneaux latéraux assemblés. Les pièces B peuvent avoir besoin d'être légèrement reculées pour un alignement correct.

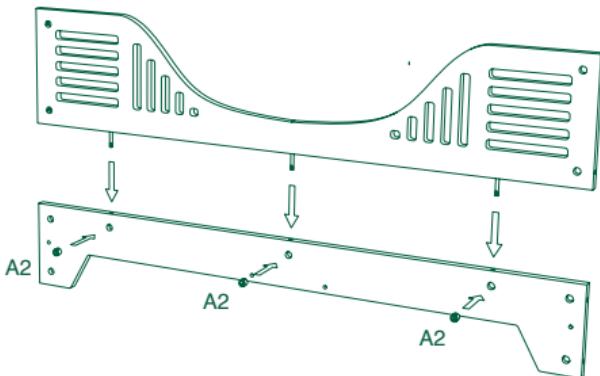



DETAIL 1 / DÉTAIL 1

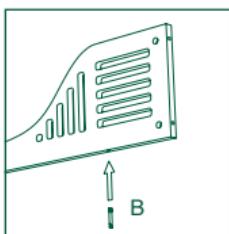

DETAIL / DÉTAIL 2

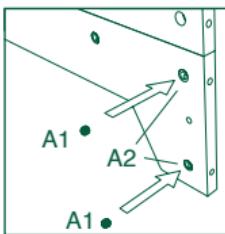

DETAIL / DÉTAIL 3

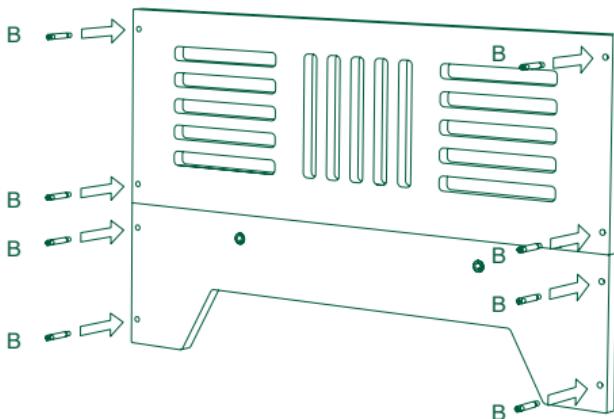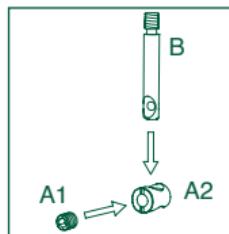

PIECES INCLUDED / PIÈCES INCLUSES

Refer to pouch for true to life diagram of hardware.



Side Panel (x2)
Panneau latéral (x2)



Side Panel Foot (x2)
Panneau inférieur latéral (x2)



End Panel (x2)
Panneau d'extrême (x2)



End Panel Foot (x2)
Panneau inférieur
d'extrême (x2)



Mattress Support (x1)
Support de matelas (x1)



A1 (x26)



B (x26)



A2 (x26)



J (x8)



Allen Key (x1)

Philips head screwdriver required for assembly. Tournevis cruciforme requis pour le montage.
More fun when done with two people. Even better with an electric screwdriver.

NOTES

- For maintenance, cleaning and storage information, please refer to the lo Crib Assembly Instructions.
 - According to CPSC regulations Toddler Beds are not intended for use for children younger than 15 months or more than 50lbs.
 - Not to be used as toddler bed beyond the 50lbs limit.
 - Intended for use with full-size crib mattress having minimum dimensions of 51 5/8 in. (1310 mm) in length and 27 1/4 in. (690 mm) in width and 6 in. (150 mm) in thickness.
 - Conversion Kit does not include a base or mattress support, includes upper side and end panels only.
-
-

NOTES

- Pour l'entretien, le nettoyage et l'entreposage, veuillez vous référer à *manuel de montage du Lit Bébé lo*.
- Le meuble n'est pas destiné à des enfants de moins de 15 mois ou pesant plus de 23kg ou 50lbs.
- Le meuble requiert l'utilisation d'un matelas ayant les dimensions minimales de 51 5/8 pouces (1310 mm) de long, 27 1/4 pouces (690 mm) de large et 6 pouces (150 mm) d'épaisseur.
- Le Kit de Transformation inclut le panneau d'appui, les panneaux supérieurs et n'inclut pas de base ou de support de matelas.

kalon

IO TODDLER BED & CONVERSION KIT ASSEMBLY INSTRUCTIONS

*INSTRUCTIONS
POUR LE MONTAGE
D'ULIT
D'ENFANTIO*

Model NO: Io Toddler Bed 013 & Io Conversion Kit 012 | KALON STUDIOS

www.kalonstudios.com | studio@kalonstudios.com

P.O. Box 421462 | Los Angeles | CA 90042 | 866.514.2034